

IX.6.2-SYSTEM-EDEX02 SUBROUTINE EDEX02

Description

Subroutine EDEX02 is the execution subroutine for the frequency table and frequency plot displays.

Calling Sequence

```
CALL EDEX02 (NVAR, HEAD, VARNAM, IWIND, TDSP, DSP, NYRS, NBYRS, IHYRD, IBHYRD,  
             YRWT, A, KODE, VALUE, UNITS, IPAGE, PRIN, IP, IPP)
```

Argument List

<u>Argument</u>	<u>Input/ Output</u>	<u>Type</u>	<u>Dimension</u>	<u>Description</u>
NVAR	Input	I*4	1	Output variable indicator: 1 = maximum mean daily value 2 = minimum mean daily value etc.
HEAD	Input	A20	1	User supplied header information to be printed at top of the summary table
VARNAM	Input	A8	1	Run identifier
IWIND	Input	I*4	1	Sequence index for statistics window; determines location of statistics window parameters in array ETIME
TDSP	Input	R*4	1	Contains time series information for the display including type of time series, time series identifier, data type and data time interval
DSP	Input	R*4	6	Display parameters for the plot subroutine; indicates which time series are to be plotted
NYRS	Input	I*4	1	Number of years of time series values
NBYRS	Input	I*4	1	Number of years of base period time series values
IHYRD	Input	I*4	1	First year of historical time series

<u>Argument</u>	<u>Input/ Output</u>	<u>Type</u>	<u>Dimension</u>	<u>Description</u>
IBHYRD	Input	I*4	1	Yearly weight; values range from 0 to 1 and sum to 1 over all years
A	Input	R*4	1	Contains time series values
KODE	Input	I*4	1	For output variable number of days above/below a 'VALUE', KODE specifies whether above (KODE=1) or below (KODE=2) has been chosen
VALUE	Input	R*4	1	See 'VALUE' in the above description
UNITS	Input	A*4	1	Units of time series values
IPAGE	Input	I*4	1	Determines whether pagination (IPAGE=1) occurs prior to summary table or not (IPAGE≠1)
PRIN	Output	R*4	12x50	Frequency values for output variables
IP	Output	I*4	6x51	Plot positions for fitted time series
IPP	Output	I*4	6x51x3	Plot positions for sample time series